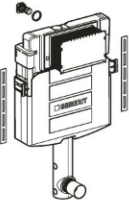





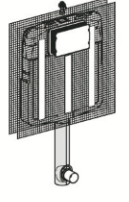





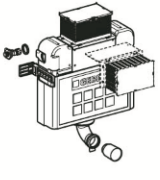


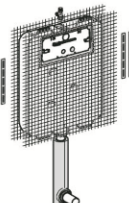



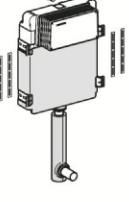




Kumanda kapaklarına genel bakış

	Montaj elemanı	Kumanda kapakları				
	Kombifix, Duofix Alaturka	İki kademeli			Start - Stop / Tek kademeli	
Dizayn	UP320 	Sigma50 115.788.xx.1 	Samba 115.770.xx.1 	Twist 115.780.xx.1 Twist 115.782.xx.1 	Sigma10 115.758.xx.1 	Tango 115.760.xx.1 
	UP700 	Sigma50 115.788.xx.1 	Samba 115.770.xx.1 	Twist 115.780.xx.1 Twist 115.782.xx.1 	Sigma10 115.758.xx.1 	Tango 115.760.xx.1 
	UP200 	Kappa20 115.228.xx.1 	Kappa50 115.260.xx.1 (metal) Kappa50 115.258.xx.1 (paslanmaz çelik) 			
Standart	110.7xx 	Twinline 115.888.xx.1 			200F 115.222.xx.1 	Highline 115.151.xx.1 Highline 115.152.00.1 
	110.8xx 	Twinline 115.888.xx.1 			200F 115.222.xx.1 	Highline 115.151.xx.1 Highline 115.152.00.1 